

MODEL JKW-6 SUPERBUTE™

Outdoor Current Transformer

25 kV, 5 A to 1,200 A,
50/60 Hz, 150 kV BIL



Application

Designed for outdoor service; suitable for operating meters, relays, and control devices. Rated Distribution class with a compact design for maximizing efficiency in solid-state revenue metering applications. Model JKW-6 is also has designs for substation application with higher burden and relay ratings.

Features

- Weight: 75 lbs (unit), 85 lbs (shipping)
- Dimensions: 15.94" (h) x 10.88" (w) x 12.38" (d)
- Creep Distance: 24" [609.6 mm]
- Strike Distance: 12.51" [318 mm]
- Insulation: HY-BUTE 60™ Butyl Rubber
- Insulation Class: 150 kV BIL, Outdoor
- Design Standard: IEEE C57.13

Reference Drawings & Accessories

Accuracy Curve(s) at 60 Hz

- Single-Ratio
 - 5 A to 300 A, and 600 A; 756X050001 through 756X050011, and 13 - 9689241662
 - 400 A and 800 A; 756X050012 and 756X050014 - 9689241663
- Dual-Ratio
 - Lower Tap Ratings; 756X050041 through 756X050048 - 9689241858
 - Higher Tap Ratings; 756X050041 through 756X050048 - 9689241857

Excitation Curve(s)

- 9932600052

Accessories

- "L" Mounting Brackets - 8944634001
- Auxiliary "L" Mounting Brackets - 8944270001
- Channel Bracket - 5466227001
- Suspensions Hooks - 8944630001
- Secondary Conduit Box - 9689897001



461 Boston Street, Unit E6, Topsfield, MA 01983
Toll Free (800) 644-9773 · Phone (978) 887-2020
meters@spectrumind.com

Unit Selection JKW-6





CURRENT RATIO	METER CLASS	RELAY CLASS	RF ¹	MECHANICAL LIMIT, Amps	1-Sec THERMAL LIMIT, Amps	CATALOG NUMBER
5:5	0.3B0.9	T100	3.0	1,850	1,000	756×050001 ²
10:5	0.3B0.9	T100	3.0	3,700	2,000	756×050002 ²
15:5	0.3B0.9	T100	3.0	5,550	3,000	756×050003 ²
20:5	0.3B0.9	T100	3.0	7,400	4,000	756×050004 ²
25:5	0.3B0.9	T100	3.0	9,250	5,000	756×050005 ²
50:5	0.3B0.9	T100	3.0	12,500	10,000	756×050006 ²
75:5	0.3B0.9	T100	3.0	18,750	15,000	756×050007 ²
100:5	0.3B0.9	T100	3.0	25,000	20,000	756×050008 ²
150:5	0.3B0.9	T100	3.0	37,500	30,000	756×050009 ²
200:5	0.3B0.9	T100	3.0	50,000	40,000	756×0500010 ²
300:5	0.3B0.9	T100	2.8	75,000	60,000	756×0500011 ²
400:5	0.3B0.9	T100	2.5	80,000	64,000	756×0500012 ²
600:5	0.3B0.9	T100	2.0	100,000	64,000	756×0500013 ²
800:5	0.3B0.9	T100	1.5	100,000	64,000	756×0500014 ²
Single Ratio						
10:5	0.3B1.8	T200	1.5	1,850	1,000	756×050022
15:5	0.3B1.8	T200	1.5	2,775	1,500	756×050023
20:5	0.3B1.8	T200	1.5	3,700	2,000	756×050024
25:5	0.3B1.8	T200	1.5	4,625	2,500	756×050025
50:5	0.3B1.8	T200	1.5	9,250	5,000	756×050026
75:5	0.3B1.8	T200	1.5	9,375	7,500	756×050027
100:5	0.3B1.8	T200	1.5	12,500	10,000	756×050028
150:5	0.3B1.8	T200	1.5	18,750	15,000	756×050029
200:5	0.3B1.8	T200	1.5	25,000	20,000	756×050030
300:5	0.3B1.8	T200	1.5	37,500	30,000	756×050031
400:5	0.3B1.8	T200	1.5	50,000	40,000	756×050032
600:5	0.3B1.8	T200	1.5	75,000	60,000	756×050033
800:5	0.3B1.8	T200	1.25	80,000	64,000	756×050034
1,200:5	0.3B1.8	T200	1.0	150,000	120,000	756×050035
Dual Ratio						
10/20:5	0.3B0.9/0.3B1.8	T100/T200	2.0/1.5	3,700	1,000/2,000	756×050041 ²
25/50:5	0.3B0.9/0.3B1.8	T100/T200	2.0/1.5	9,250	2,500/5,000	756×050042 ²
50/100:5	0.3B0.9/0.3B1.8	T100/T200	2.0/1.5	12,500	5,000/10,000	756×050043 ²
75/150:5	0.3B0.9/0.3B1.8	T100/T200	2.0/1.5	18,750	7,500/15,000	756×050044 ²
100/200:5	0.3B0.9/0.3B1.8	T100/T200	2.0/1.5	25,000	10,000/20,000	756×050045 ²
150/300:5	0.3B0.9/0.3B1.8	T100/T200	2.0/1.5	37,500	15,000/30,000	756×050046 ²
200/400:5	0.3B0.9/0.3B1.8	T100/T200	2.0/1.5	50,000	20,000/40,000	756×050047 ²
300/600:5	0.3B0.9/0.3B1.8	T100/T200	2.0/1.5	75,000	30,000/60,000	756×050048 ²
400/800:5	0.3B0.9/0.3B1.8	T100/T200	1.5/1.25	100,000	40,000/80,000	756×050049 ²
600/1,200:5	0.3B0.9/0.3B1.8	T100/T200	1.5/1.25	125,000	50,000/100,000	756×050050 ²




Typical Nameplate

	Current Transformer	Type	Ratio	Somersworth, NH USA	
	Bil 150 kV NSV 25 kV 50-60 Hz	JKW-6	10:5		
	RF = 3.0 @ 30°C Amb		Amp		
	Acc CI @ 60 Hz 0.3 B-0.9, T100				
Caution: Read GEH-230		Cat. 756X050002		Mfd. 01 11	
				Ser. 8814989	

Dimensions, Mounting & Wiring Diagram

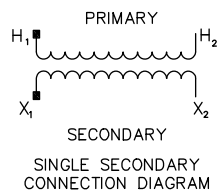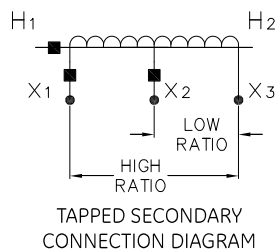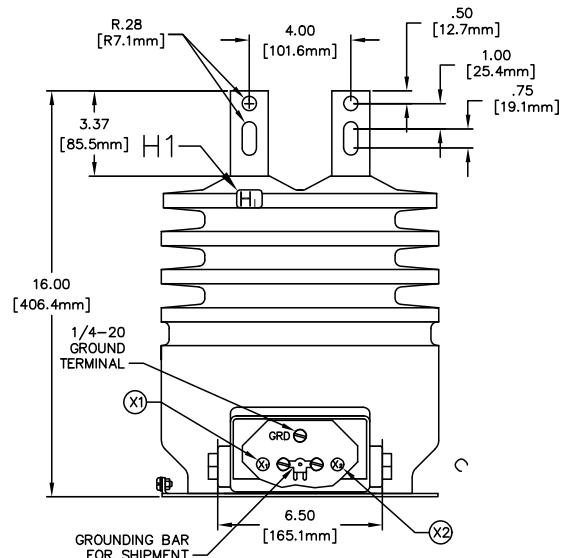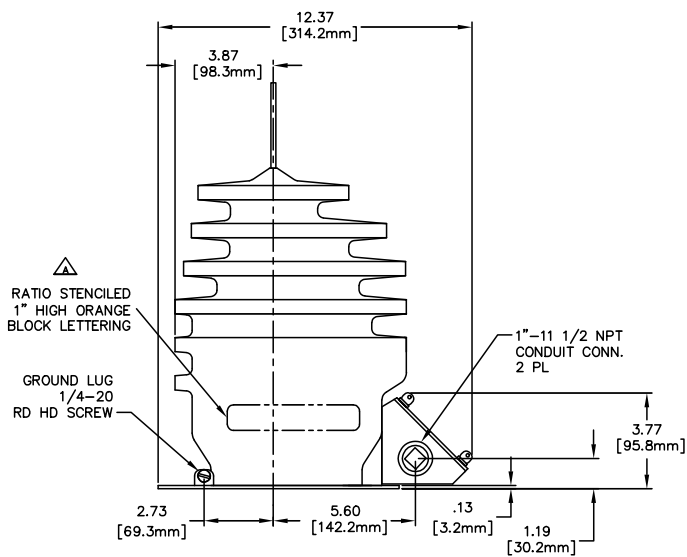

AMPS	H1/H2 TERMINAL DIMS	
	A	B
5 TO 75	1.5 (1.38MM)	.19 (4.8MM)
100 TO 200	2 (50.8MM)	.25 (6.4MM)
300 TO 800	2 (50.8MM)	.38 (9.5mm)

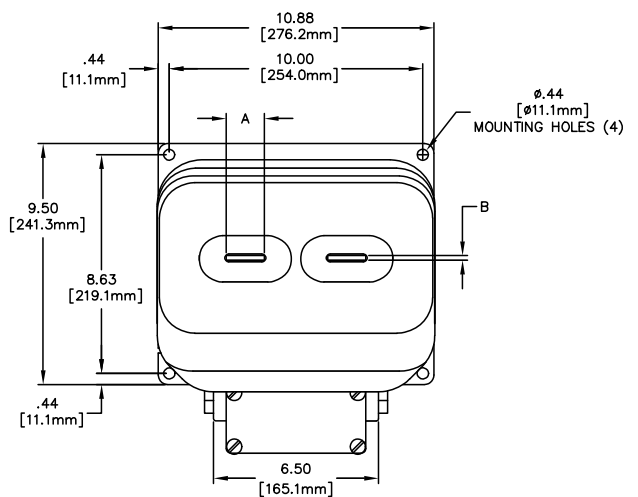

Selection Guide JKW-6

PRODUCT CLASS	5 kV	8.7 kV	15 kV	25 kV	35 kV	46 kV	69 kV
Station Class	JKW-3	JKW-4	JKW-5	JKW-150	JKW-200	JKW-250	JKW-350
BIL	60 kV BIL	75 kV BIL	110 kV BIL	150 kV BIL	200 kV BIL	250 kV BIL	350 kV BIL
Accuracy, RF	0.3B1.8, RF 1.5	0.3B1.8, RF 1.5	0.3B1.8, RF 1.5	0.3B1.8, RF 2.0/1.5	0.3B1.8, RF 2.0/1.5	0.3B1.8, RF 2.0/1.5	0.3B1.8, RF 2.0/1.5
Relay Class	T100	T100	T200	T200/T400	T200/T400	T200/T400	T200/T400
Creep Distance	12.5"	12.5"	24"	44.1"	56.6"	71.0"	86.6"
Net Weight	40 lbs	40 lbs	60 lbs	323 lbs	348 lbs	543 lbs	593 lbs
Distribution Class	JCK-3	JCK-4	JCK-5	JKW-6	JKW-7		
BIL	60 kV BIL	75 kV BIL	110 kV BIL	150 kV BIL	200 kV BIL		
Accuracy, RF	0.3B0.5, RF 3.0	0.3B0.5, RF 3.0	0.3B0.5, RF 3.0	0.3B0.9, RF 3.0	0.3B0.5, RF 3.0		
Relay Class	---	---	---	T100 or T200	---		
Creep Distance	15.5"	15.5"	15.5"	24"	27.6"		
Net Weight	35 lbs	35 lbs	35 lbs	80lbs	72 lbs		

Construction Details

Insulation

The transformer design is constructed using premium HY-BUTE 60 molded butyl rubber insulation for the transformer body. First introduced in 1955, unique formulation is non-arc tracking and resistant to heat, chemicals, ozone and ultraviolet. This tough, resilient insulating material has proven to be superior in handling mechanical, electrical and environmental extremes, when compared against other insulation designs such as porcelain, urethane or epoxy.

Core & Coil

The core is made of high-permeability, formed, silicon steel strip. The steel is characterized by having highly directional properties, that is, low core losses and high permeability in the direction of rolling. Full advantage is taken of this property of the steel by the shape and construction of the core. The core has a dispersed-gap construction with interleaved laminations. This type of core provides a construction that will not shift to cause any change in the transformer characteristics. After being assembled into the coils, the core is securely clamped and permanently fastened to the base plate by a heavy steel strap which encircles the core and is welded to the base.

Windings

The primary winding consists of two coils connected in series. Each coil surrounds one leg of the core. This design reduces leakage losses, thus improving the accuracy of the transformer. It also provides a higher mechanical strength than a single coil construction. The secondary winding consists of two coils

Primary Terminals

The primary terminals are flat copper bars, each with one bolt hole and a slot, which facilitates connections to various size cable lugs. The terminal surfaces are tin-plated to reduce contact resistance, and to allow connection to either copper or aluminum conductors.

Secondary Terminals & Conduit Box

The secondary terminals are in a compartment molded in the side of the transformer. The compartment has a molded phenolic cover held by four brass, nickel-plated, captive thumbscrews, which engage a metal insert molded in the rubber. The thumbscrews are drilled to accommodate a seal wire. The compartment also has two openings for 1 inch conduit connection. The secondary terminals are the threaded type, each with cup washer, lock washer and nut. A manually operated, secondary short-circuiting switch is located between the secondary terminal studs.

Testing

Rigorous test requirements go beyond ANSI/IEEE routine requirements in order to ensure long term reliability. Test reports are saved electronically and can be e-mailed in various formats upon request.

Ground Terminal

A ground terminal is provided in the secondary compartment for making an optional connection to one of the secondary terminals. The 1/4-20 round-head ground terminal is welded in the baseplate bracket, and is furnished with a nut, cup washer, flat washer, and lock washer.



Polarity

The primary and secondary polarity markers are molded in the insulation. They are thus permanent and integral parts of the transformer and cannot readily be obliterated. The polarity is subtractive.

Baseplate and Mounting

The base is made of stainless-steel. A stainless-steel grounding lug is welded to the baseplate and provides a hole for attaching the grounding connector. Mounting holes or slots are located in each corner of the baseplate. Mounting hardware is supplied with the transformer. The transformer can be mounted with the primary terminals in any position—up, down, or horizontal. It can be bolted directly to a crossarm attached by “U” bolts or suspension hooks, or mounted on double crossarms, using channel brackets. Refer to the Accessories Listing on the transformer data sheet for Catalog Numbers.

Nameplate

The nameplate is made of stainless-steel and located on the base of the transformer. Information is per IEEE designation, laser-engraved for easy- to-read form. Custom barcoding available upon request.

Maintenance

These transformers require no maintenance other than an occasional cleaning if installed in an area where air contamination is severe.



461 Boston Street, Unit E6, Topsfield, MA 01983
Toll Free (800) 644-9773 · Phone (978) 887-2020
meters@spectrumind.com