



Technical Data Sheet

ALPHA 20A+



ALPHA 20A+ is a compact multifunction instrument which Measures important electrical parameters in 3 phase 4 Wire and 3 phase 3 Wire Network & replaces the multiple analog panel meters.

Special Features

- MODBUS (RS485) Communication (optional)
- Pulse/Limit Switch output (optional)
- TRMS measurement.
- 3 Line 4 Digits ultra bright LED Display (up to 9999)
- On site Programmable CT/PT Ratios
- User selectable CT Secondary 1A/5A
- User selectable PT Secondary from 100 VLL to 500 VLL
- Programmable Energy format & Energy rollover count
- Wide auxillary Power Supply which can accept any input between 60V – 300V AC/DC or 20-40 VAC or 20-60 VDC

Application

ALPHA 20A+ measures important electrical parameters in 3 phase 4 Wire and 3 phase 3 Wire Network & replaces the multiple analog panel meters. It measures electrical parameters like AC Voltage, AC Current, Frequency, Active, Reactive, Apparent Power, Import ,Export Energy & many more.

Product Features

On site programmable PT/CT ratios	It is possible to program primary of external potential Transformer (PT), primary of external Current Transformer (CT) on site via front panel keys by entering into Programming mode.	Optional Pulse Output / Limit switch (Relay output)	The instrument can be programmed as Pulse output or Limit switch.
User selectable CT Secondary 5A /1A	The secondary of external Current Transformer (CT) can be programmed on site to either 5A or 1A using front panel keys.	Pulse Output	The optional pulse output is a potential free , very fast acting relay contact which can be used to drive an external mechanical counter for energy measurement.
User selectable PT Secondary	The secondary of external Potential Transformer (PT) can be programmed on site from 100VLL to 500VLL using front panel keys. User can set the display in auto scrolling mode or fixed screen mode using front panel keys.	Limit Switch	The instrument will trip the relay if the programmed parameter exceeds the programmed Trip Limits.
Low back depth	The instrument has very low back depth (behind the panel) 60 mm.	Optional MODBUS (RS485) Output	The optional Modbus output enables the instrument to transmit all the measured parameters over standard MODBUS (RS485).
Four function keys	Using the four function key, it is possible to go desired parameter screen instantly..	Configuration of Instrument via MODBUS	The instrument setting can be configured locally via front panel keys by entering into the programming mode or remotely via MODBUS (Rs485). Note: The MODBUS communication parameters can only be set locally via front panel keys in programming mode.
Demand Measurement	Measures & Displays Current Demand, kVA Demand, kW Import Demand, kW Export Demand. Any of the parameters can be assigned to optional Limit switch.	Storage of parameters possible	The instrument stores minimum and maximum values for System Voltage, System Current, Run Hour, ON Hour & number of Interrupts. Every 60 sec stored values are updated.
3 line 4 digits LED display	Simultaneous display of 3 Parameters.	Enclosure Protection for dust and water	Conforms to IP 54 (for front face) & IP 20 (for back) IP 65 (optional) (for front with seal) as per IEC60529.
RPM Measurement	The instrument display Rotation per minutes for generator applications. Number of poles can be set on site depending upon application requirement.	EMC Compatibility	Compliance to International standard IEC 61326.
Energy Count Storage	In case of power failure, the instrument memorizes the last energy count. Every 1 min, the instrument updates the energy counter in the non-volatile memory.	Interference Emission	IEC 61326-1 : 2005, Class A
User selectable 3 phase 3 Wire or 4Wire or Single phase Network	User can program on site the network connection as either 3 Phase 3 Wire or 4 Wire or single phase network using front panel keys.	Interference Immunity	IEC 61326-1 : 2005
Onsite selection of Auto scroll / Fixed Screen	User can set the display in auto scrolling mode or fixed screen mode using front panel keys.	Electrostatic discharge contact /air. (ESD)	IEC 61000-4-2 -- 4kV/8kV
		EM Field	IEC 61000-4-3 -- 10 V/m (80 MHz to 1 GHz) -- 3 V/m (1.4 GHz to 2 GHz) -- 1 V/m (2 GHz to 2.7 GHz)

Product Features

True RMS measurement	The instrument measures distorted wave form up to 15th Harmonic.
Energy Measurement (Import & Export)	Active Energy (kWh), Reactive Energy (kVArh), Apparent Energy (kVAh). Any of the parameters can be assigned to optional Pulse output.
Programmable Energy format & Energy rollover count	Customer can assign the format for energy display on MODBUS (RS485) in terms of W, kW or MW. Additional to this, customer can also set a rollover count from 7 to 14 digits depending on the energy format, after which the energy will roll back to zero.

Burst	IEC 61000-4-4 -- 2 kV (5/50 ns, 5 kHz)
Surge	IEC 61000-4-5 -- 1 kVLL / 2 kVLN.
Conducted RF	IEC 61000-4-5 -- 3 V (150 kHz to 80 MHz)
Rated Power Frequency magnetic Field	IEC 61000-4-8 -- 30 A/m
Voltage dip	IEC 61000-4-11 -- 0% during 1 cycle. -- 40% during 10/12 cycles. -- 70% during 25/30 cycles.
Short interruptions cycles.	IEC 61000-4-11 -- 0% during 25/30 cycles. 25 cycles for 50 Hz test. 30 cycles for 60 Hz test.

Technical Specifications


Accuracy	
Voltage	$\pm 1\%$ of Nominal Value.
Current	$\pm 1\%$ of Nominal Value.
Frequency	0.5% of mid frequency
Active Power	$\pm 1\%$ of Nominal Value.
Re-Active Power	$\pm 1\%$ of Nominal Value.
Apparent Power	$\pm 1\%$ of Nominal Value.
Active Energy	$\pm 1\%$
Reactive Energy	$\pm 1\%$
Apparent Energy	$\pm 1\%$
Power Factor	2% of Unity
Phase angle	2% of range

Reference conditions for Accuracy	
Reference temperature	23°C +/- 2°C
Input waveform	Sinusoidal (distortion factor 0.005)
Input frequency	50 or 60 Hz $\pm 2\%$
Auxiliary supply voltage	Rated Value $\pm 1\%$
Auxiliary supply frequency	Rated Value $\pm 1\%$
Voltage Range	20... 100% of Nominal Value.
Current Range	10... 100% of Nominal Value.
Power	Cos phi / sin phi = 1 for Active / Reactive Power & Energy. 10... 100% of Nominal Current & 20... 100% of Nominal Voltage.
Power Factor / Phase Angle	40... 100% of Nominal Current & 20... 100% of Nominal Voltage.

NOTE :

Measurement error is normally much less than error specified above. Variation due to influence quantity is less than twice the error allowed for reference condition.

Dimension Details

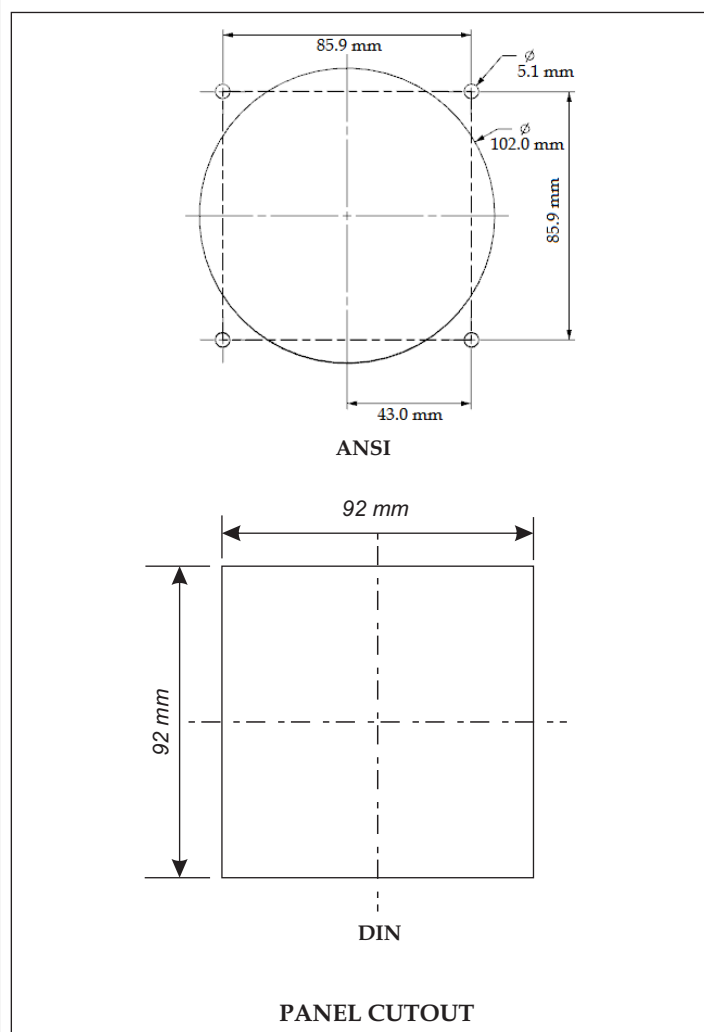

Technical Specifications

Input Voltage

Nominal input voltage (AC RMS)	Phase -Neutral 288.6V L-N , Line-Line 500V L-L
Max continuous input voltage	120% of rated value
Nominal input voltage burden	< 0.3 VA approx. per phase
System PT secondary values	100VLL to 500VLL programmable on site.
System PT primary values	100VLL to 692kVLL programmable on site.

Input Current

Nominal input current	5A / 1A AC RMS
System CT secondary values	1A & 5A programmable on site
System CT primary values	From 1A up to 9999A (for 1 or 5 Amp)
Max continuous input current	120% of rated value
Nominal input current burden	< 0.2 VA approx. per phase

Auxiliary Supply

External Aux	60 V - 300V AC-DC 20-40VAC, or 20-60VDC
Higher Aux Nominal Value	230 V AC/DC 50-60 Hz for AC Aux
Lower Aux Nominal Value	24V AC/48 V DC 50-60 Hz for AC Aux
Frequency range	45 to 65 Hz
VA burden	< 5 VA Approx.


Overload Withstand

Voltage	2 x rated value for 1 second, repeated 10 times at 10 second intervals
Current	20x rated value for 1 second, repeated 5 times at 5 min intervals


Operating Measuring Ranges

Voltage Range With External Aux	10... 120% of rated value
Current Range	10 ... 120% of rated value
Frequency	45...65 Hz.
Power Factor	0.5 Lead ... 1 ... 0.5 Lag.

Dimension Details

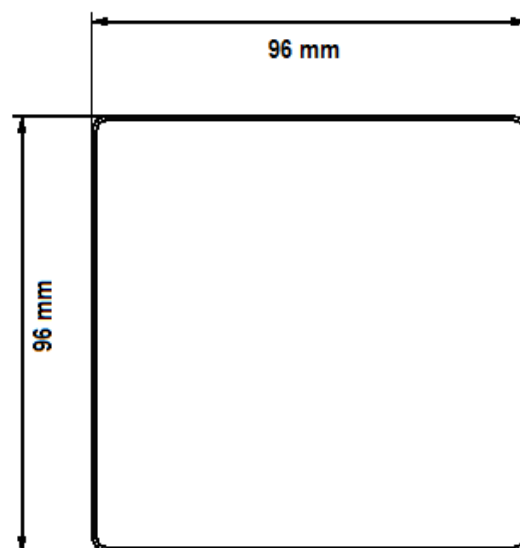

DIN

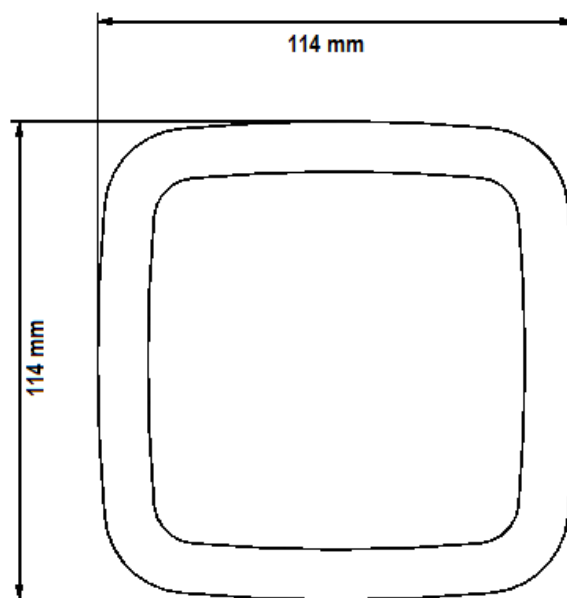

ANSI

Meter front view

Technical Specifications

Limit Switch (Relay)

Switching Voltage & Current for Relay	240 VDC ,5 A (1NO+1NC)
---------------------------------------	------------------------

Influence of Variations

Temperature coefficient	0.025%/°C for Voltage
	0.05%/°C for Current

Display update rate

Response time to step input	1 sec approx.
-----------------------------	---------------

Applicable Standards

EMC	IEC 61326-1: 2005
Safety	IEC 61010-1-2010 , Permanently connected use
IP for water & dust	IEC60529

Safety

Pollution degree	2
Installation category	III
High Voltage Test	3.7 kV AC RMS, for 1 minute

Environmental

Operating temperature	-20 to +70°C
Storage temperature	-30 to +80°C
Relative humidity	0 to 90% non condensing
Warm up time	Minimum 3 minute
Shock	15g in 3 planes
Vibration	10... 55... 10 Hz, 0.15mm amplitude


Enclosure

Front	IP 54
Front with seal (Optional)	IP 65
Back	IP 20

Dimensions and Weights

Bezel size	96 mm x 96 mm DIN 43 718. 114 mm x 114 mm ANSI
Panel cut-out	92 +0.8 mm x 92 + 0.8 mm. DIN Diameter 102 mm ANSI
Overall depth	60 mm
Weight	450 gm. Approx.(with output option)

Dimension Details

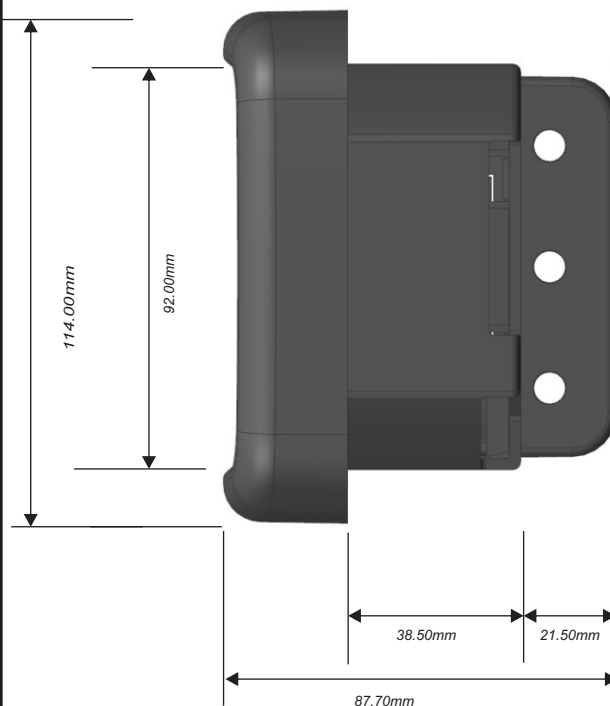

Meter side view

Technical Specifications

Pulsed Output Option

Energy (can be programmed for different energy parameters simultaneously)



Relay contact	(1NO+1NC)
Switching Voltage & current for Relay	240 VDC ,5 A

Default pulse rate divisor

1 per Wh (up to 3600W)	1 per kWh (up to 3600kWh)	1 per MWh (above 3600kW)	
Other Pulse rate divisors (applicable only when Energy on RS485 is in W)			
10	1 per 10 Wh (up to 3600W)	1 per 10 kWh (up to 3600kWh)	1 per 10 MWh (above 3600kW)
100	1 per 100 Wh (up to 3600W)	1 per 100 kWh (up to 3600kWh)	1 per 100 MWh (above 3600kW)
1000	1 per 1000 Wh (up to 3600W)	1 per 1000 kWh (up to 3600kWh)	1 per 1000 MWh (above 3600kW)

Pulse Duration : 60 msec, 100 msec, 200 msec.
Above options are also applicable to Apparent and Reactive Energy.


Electrical Connections

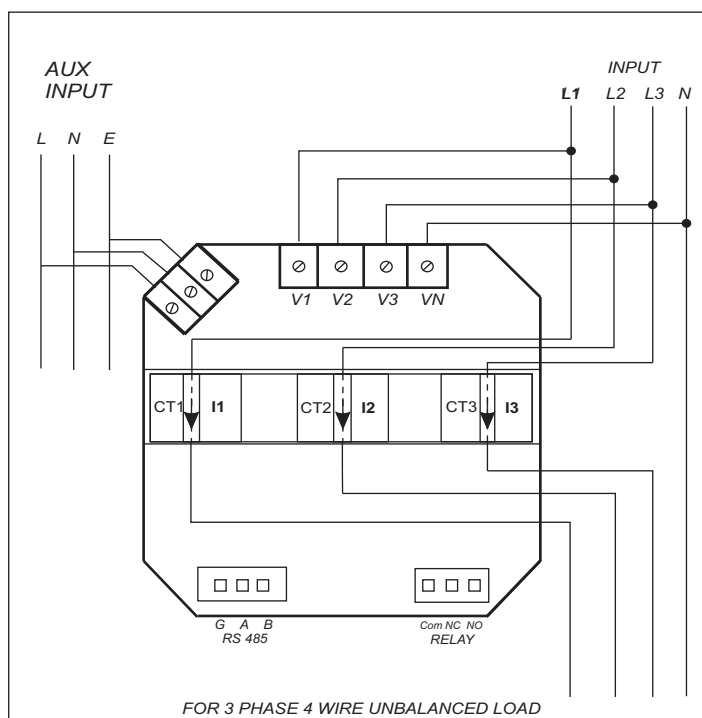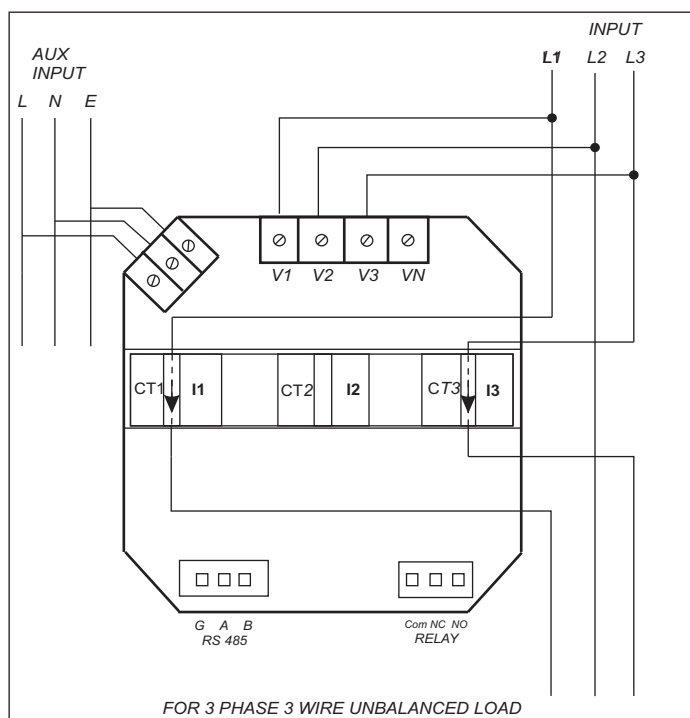

It is recommended that the wires used for connections to the instrument should have lugs soldered at the end. That is, the connections should be made with Lugged wires for secure connections. The Maximum diameter of the lug should be 7.0 mm and maximum thickness 3.5 mm.

Permissible cross section of the connection wires: $\leq 4.0 \text{ mm}^2$ single wire or $2 \times 2.5 \text{ mm}^2$ fine wire.

Electrical Connections

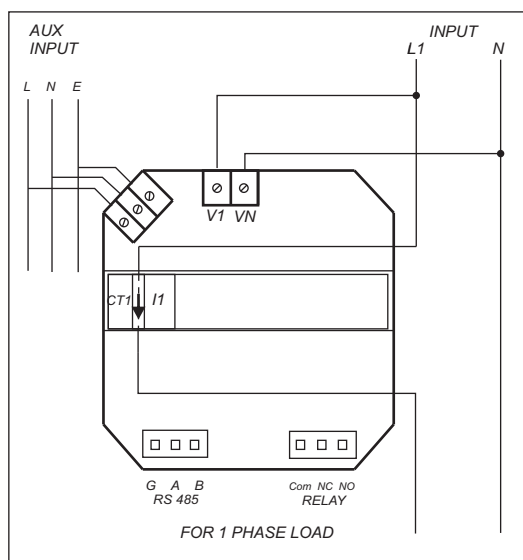

Parameter measurement and Display

Sr No	Parameter	3 Phase 4 Wire	3 Phase 3 Wire	1 Phase 2 Wire
1.	System Volts	✓	✓	✓
2.	System Current	✓	✓	✓
3.	Volts R-N (Phase Voltage for Single phase)	✓	✗	✓
4.	Volts Y-N	✓	✗	✗
5.	Volts B-N	✓	✗	✗
6.	Volts R-Y	✓	✓	✗
7.	Volts Y-B	✓	✓	✗
8.	Volts B-R	✓	✓	✗
9.	Current R (Phase Current for Single phase)	✓	✓	✓
10.	Current Y	✓	✓	✗
11.	Current B	✓	✓	✗
12.	Frequency	✓	✓	✓
13.	System Active Power (kW)	✓	✓	✓
14.	Active Power R (Phase Power for Single phase) (kW)	✓	✗	✓
15.	Active Power Y (kW)	✓	✗	✗
16.	Active Power B (kW)	✓	✗	✗
17.	System Re-active Power (kVAr)	✓	✓	✓
18.	Re-active Power R (Phase Power for Single phase) (kVAr)	✓	✗	✓
19.	Re-active Power Y (kVAr)	✓	✗	✗
20.	Re-active Power B (kVAr)	✓	✗	✗
21.	System Apparent Power (kVA)	✓	✓	✓
22.	Apparent Power R (Phase Power for Single phase) (kVA)	✓	✗	✓
23.	Apparent Power Y (kVA)	✓	✗	✗
24.	Apparent Power B (kVA)	✓	✗	✗
25.	System Phase Angle	✓	✓	✓
26.	System Power Factor	✓	✓	✓
27.	Power Factor R	✓	✗	✓

- Available - Not available

Parameter measurement and Display

Sr No	Parameter	3 Phase 4 Wire	3 Phase 3 Wire	1 Phase 2 Wire
28.	Power Factor Y	✓	✗	✗
29.	Power Factor B	✓	✗	✗
30.	Phase Angle R	✓	✗	✓
31.	Phase Angle Y	✓	✗	✗
32.	Phase Angle B	✓	✗	✗
33.	Active Energy Import (kWh)	✓	✓	✓
34.	Active Energy Export (kWh)	✓	✓	✓
35.	Reactive Energy Import (kVArh)	✓	✓	✓
36.	Reactive Energy Export (kVArh)	✓	✓	✓
37.	Apparent Energy (kVAh)	✓	✓	✓
38.	RPM	✓	✓	✓
39.	Max (System Voltage / System Current)	✓	✓	✓
40.	Min (System Voltage / System Current)	✓	✓	✓
41.	Hour Run	✓	✓	✓
42.	ON Hour	✓	✓	✓
43.	Number of auxiliary interrupt	✓	✓	✓
44.	Current Demand	✓	✓	✓
45.	kVA Demand	✓	✓	✓
46.	kW Demand Import	✓	✓	✓
47.	kW Demand Export	✓	✓	✓
48.	Max Current Demand	✓	✓	✓
49.	Max kVA Demand	✓	✓	✓
50.	Max kW Demand Import	✓	✓	✓
51.	Max kW Demand Export	✓	✓	✓

- Available - Not available

Ordering information

Product Code	ALPHA 20A+	X	X	X	XX	X	X	0000AN
System Type	3 Ph. (3W or 4W)	3						
	1 Ph.	1						
Input Voltage	100 TO 500VL-L	1						
	57.7 TO 288.6VL-N	2						
Input Current	1/5A	1						
Power Supply	20-40VAC or 20-60VDC							
	60V – 300V AC-DC							
Limit switch	With Limit switch						L	
	Without Limit switch						Z	
MODBUS (RS 485)	With MODBUS (RS 485)						R	
	Without MODBUS						Z	