



## MU-35

**Miniature DC Volt Meter**  
**3 1/2 Digit 0.315" LED**  
**in a 1/32 DIN Case**



**A Multi-range, Easily-scaled, DC Volts Measuring, AC/DC Powered LED Meter.**

### General Features


The MU-35 is a miniature, streamlined DC voltage measuring meter. The meter has three built-in header selectable ranges of 2V, 20V and 200V. It is specifically designed to be easily user-scaled and calibrated to almost any conceivable engineering unit, such as temperature, pressure, viscosity or flow rates, etc., without requiring component changes.

On site scaling and recalibration is facilitated by multi-turn potentiometer that provide continuous adjustment within each of three header-programmable full scale ranges for span and zero offset. Display Hold and Display Test functions are also provided. The standard meters have a high efficiency red LED display. Green displays may also be specified. (See ordering information for available choices).


The MU-35 interconnects by means of a push-on screw terminal that is provided with the meter. A high quality, internally isolated, wide range, switching supply is built into every MU-35 meter. This allows the meter to operate from a wide range of AC or DC voltages. (See specifications.) The isolation ensures that ground loop currents do not affect the meter stability.

### Typical Application Connections

**DC Volts Single-ended** measurement with a Resolution of 100 milliVolt.

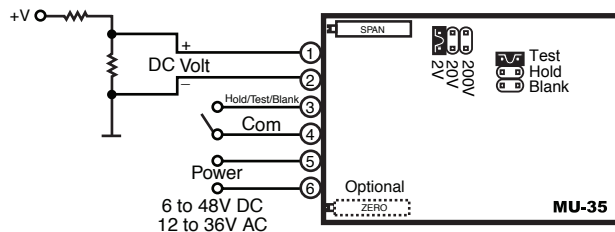

**DC Volts Differential** measurement with a Resolution of 100 milliVolt.

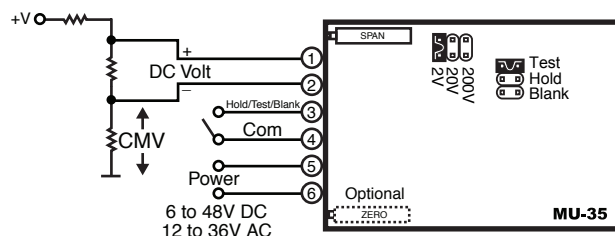

Max CMV (common mode voltage) is 50V.\*

\*Because CMV is common with meter ground, higher CMV inputs to a max of 1KV, require mechanical isolation of all contactable meter parts.

### Compatibility

The MU-Series have a matching DIN case style that is complementary to the Lynx, Leopard and Tiger family of meters. MU-Meters are the OEM's choice for economical switchboard and process indication. For economy, each model is dedicated to a specific application and designed for quick and easy installation.



### Specifications


- Input Configuration:** .....Single-ended with optional provision to offset the zero of the reading being displayed
- Input Impedance:**.....1M minimum
- Full Scale Ranges:** .....Three built-in header selectable ranges of  $\pm 2V$  DC,  $\pm 20V$  DC and  $\pm 200V$  DC full scale
- A/D Converter:** .....12 Bit Dual Slope
- Accuracy:** ..... $\pm (0.05\%$  of reading + 2 digits)
- Temperature Coefficient:**...100ppm/ $^{\circ}C$  (Typical)
- Warm up Time:** .....One minute to specified accuracy
- Conversion Rate:** .....3 readings per second
- Display:** .....0.315" High Efficiency Red LED, optional Green LED, optional non-functional, right hand side dummy zero available
- Decimal Selection:** .....User programmable to 4 positions
- Over-range Indication:** ....If input exceeds full scale on any range being used, most significant "1" digit & polarity symbol is displayed all other digits blank.
- Power Supply:** .....6V DC to 48V DC or 12V AC to 36V AC. Approximately 1.5 watts.
- Operating Temperature:** ..0 $^{\circ}C$  to +50 $^{\circ}C$
- Storage Temperature:** .....-20 to 70  $^{\circ}C$
- Relative Humidity:** .....95% (non-condensing)
- Case Dimensions:** .....1/32 DIN (Bezel 48Wx24Hmm)  
 Depth behind bezel (3.19") 81mm Plus (0.38") 9.5mm for connector
- Weight:** .....312 gms (11oz)  
 397 gms (14 oz) when packed

### MU-Series, the OEMs choice for DC voltage measuring

MU-35 . . . . .3.5 digit, Iso., 2/20/200 VDC, 5-36VDC/12-24VAC Pwr

MU-35CL . . .3.5 digit, Iso., 4-20mA input, 5-36VDC/12-24VAC Pwr

# MU Case Dimensions and Panel Cutouts

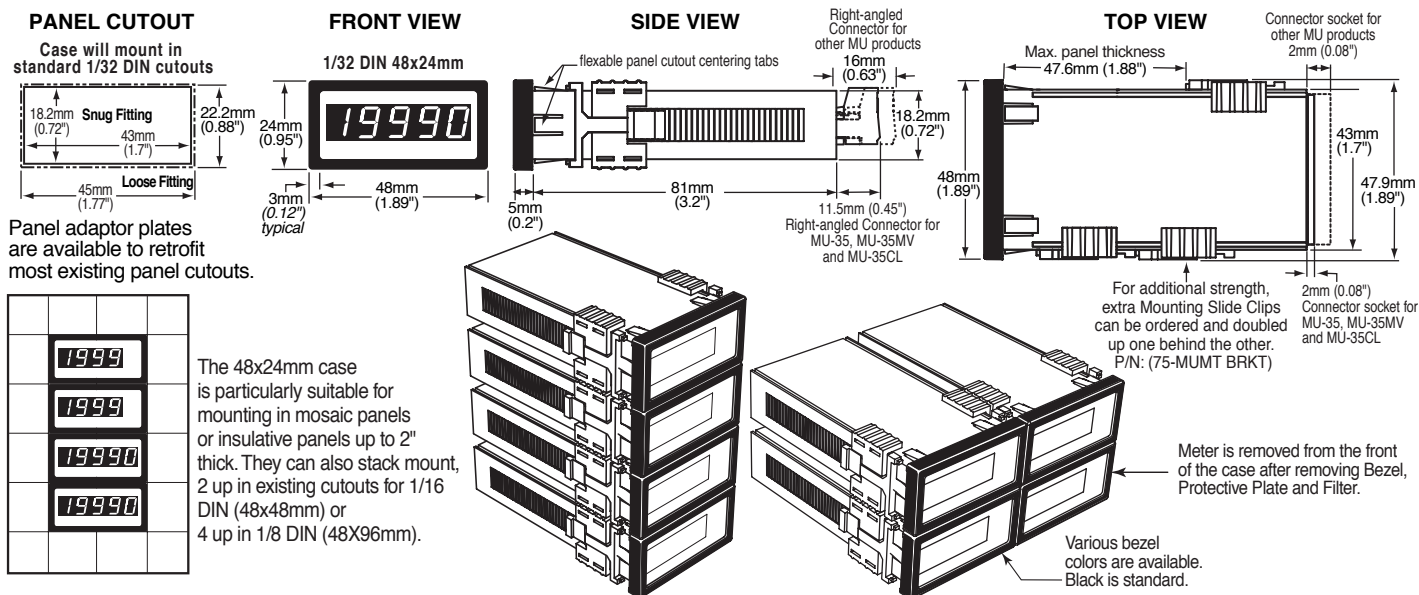

## Ordering Information

### Standard Options for this Model Number

| Part Number                                                                                                                                         | Description                                         | List |
|-----------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------|------|
| ► <b>BASIC MODEL NUMBER</b> Includes plug in type screw terminals, standard display and standard power supply unless optional versions are ordered. |                                                     |      |
| MU-35 .....                                                                                                                                         | 3.5 digit, Iso., 2/20/200 VDC, 5-36VDC/12-24VAC Pwr |      |
| ► <b>DISPLAY</b>                                                                                                                                    |                                                     |      |
| <b>STANDARD... Red LED, 0.3 inch high</b>                                                                                                           |                                                     |      |
| MU-GREEN .....                                                                                                                                      | Green LED                                           |      |
| MU-RED 4.5 .....                                                                                                                                    | Dummy Zero Display Option w/ RED Display            |      |
| MU-GREEN4.5 ...                                                                                                                                     | Dummy Zero Display Option w/ Green Display          |      |

### Special Options and Accessories

| Part Number                                              | Description                                                 |
|----------------------------------------------------------|-------------------------------------------------------------|
| ► <b>SPECIAL OPTIONS</b> (Specify Inputs & Req. Reading) |                                                             |
| HD-CHANGE ..                                             | Range change from the standard input as shown in BOLD Type. |
| V0-50K .....                                             | Zero offset potentiometer 50k                               |
| CB-FS35 .....                                            | Non-Std Range and Scale Changes                             |
| ► <b>ACCESSORIES</b>                                     |                                                             |
| MU-CASE48X24 ..                                          | 48x24mm Complete Case with Bezel .                          |
| 75-MUBEZEL .....                                         | Black Bezel for 48x24mm Case                                |
| 75-MUMTBRKT ...                                          | Mounting Slide Clips, extra set (48x24mm case size) .       |

### WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

### USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.