



Autozeroing Panel Meter 3 1/2 Digit 0.56" LED In a NEMA Style Case

General Features

Typical Application Connections

Compatibility

**Traditional
NEMA
STYLE USA
CASE**

Specifications


RP-Series, a reliable replacement for your application

RP-3500D23.5 digit Red LED Ultra Stable, Differential, 2VDC std
 RP-3500D2BCDRP-3500D2 with Tri-State Parallel BCD, 2VDC std
 RP-35A3.5 digit Red LED with Differential Inputs, 2VDC std
 RP-35AR3.5 digit Red LED, Autoranging, 200mV / 2VDC

RP-35U	3.5 digit Red LED, Low Cost, 2VDC std
RP-4500D2	4.5 digit RED LED Ultra Stable, Differential, 2VDC std
RP-4500D2BCD	RP-4500D2 with Tri-State Parallel BCD. 2VDC std

RP Case Dimensions and Panel Cutouts

This NEMA Case will fit any existing cutout with dimensions that are between the Snug and Loose Fitting dimensions shown below.

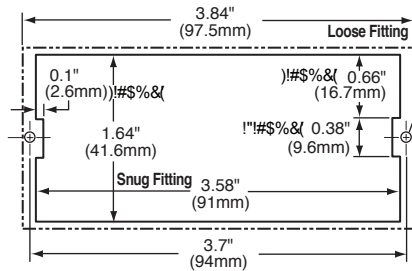


Panel Cutout for Front Panel Removal

To enable removal of the panel meter from a mounting panel without requiring rear access, make the panel cutout as shown above, using the mounting plate supplied with the meter as a template. The mounting holes should then be tapped to match the mounting screws.

To remove the face plate, carefully insert screwdriver blade at bottom slot to release catch and gently pry outward to release the plate.

For new installations see Optimum Panel Cutout or Panel Cutout for Front Panel Removal

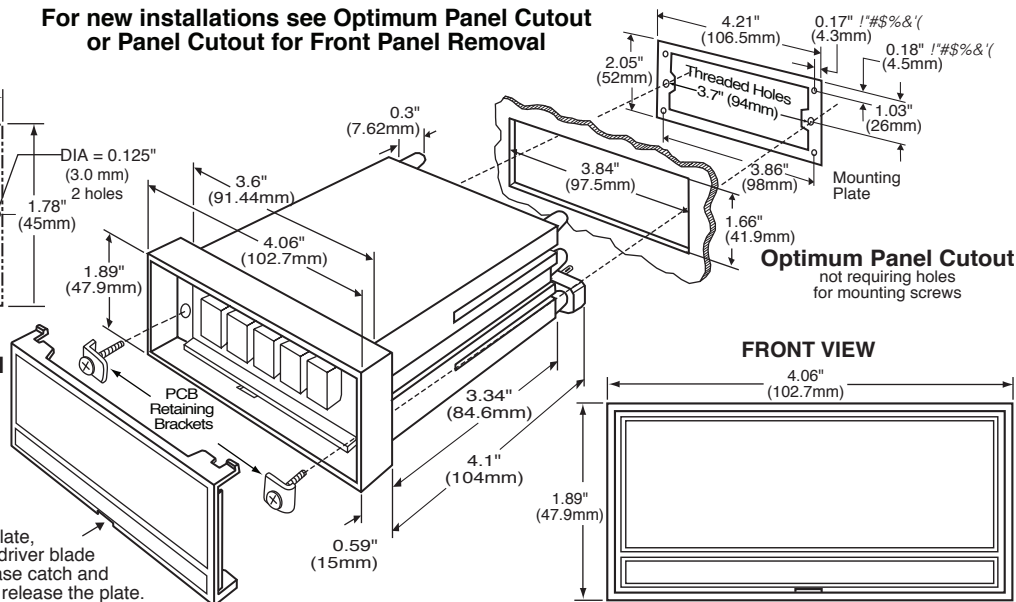

Ordering Information

Standard Options for this Model Number

Part Number .Description .List

► BASIC MODEL NUMBER

RP-35A3.5 digit Red LED, w/Differential Inputs, 2VDC std . .

Special Options and Accessories

Part Number .Description .List

► SPECIAL OPTIONS (Specify Inputs & Req. Reading)

VA-200MVFI200mVDC Range Change
VF-0020V20VDC Range Change
VF-0200V200VDC Range Change for 3.5 digit RP Series
VF-1200V1200VDC Range Change for 3.5 digit RP Series
VS-3.5Non-Std Range and Scale - 3.5 Digit RP Meters

► ACCESSORIES

CN-L15PCB Edge Connector, Solder Type, Dual row 15 Pins
OP-NSEAL/UM96x48mm clear lockable front cover - NEMA 4X, splash proof
for RP & UM Series (Factory Installed)
RPCASEReplacement Case w/Mounting Hardware

WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.