



0.56" LEDs

UM-Series



TEXMATE

UM-45

2V DC to 200V DC Meter
4 1/2 DIGIT with 0.56" LEDs
in a Traditional NEMA Style Case



A utility meter, for high resolution single or differential DC voltage measurement, that can be easily scaled to any process engineering units of measure.

General Features


The UM-45 is an economical, high resolution DC voltage measuring meter with three header selectable full scale ranges of 2V, 20V and 200V. A five position Span Adjust header facilitates scaling to almost any process engineering unit of measure.

The standard meter has a high efficiency red LED display and user selectable AC power inputs of 100V AC to 120V AC or 200V AC to 240V AC are provided. An Optional 24V AC or an auto sensing isolated AC/DC 24V switching power supply can be ordered.


The standard meter is provided with TB-KIT screw terminal blocks and insulated quick-disconnects. For the greatest convenience and ease of use, order the optional preconfigured Push-On screw terminal connectors. (see Push-On Screw Terminals and Ordering Information)

Typical Application Connections

DC Volts Single-ended measurement with a Resolution of 10 millivolt.

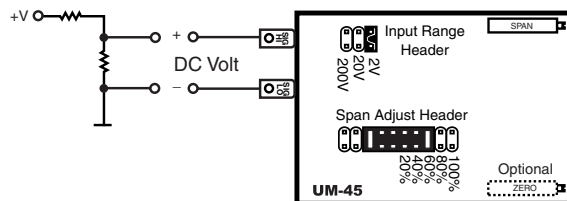

DC Volts Differential measurement with a Resolution of 10 millivolt.

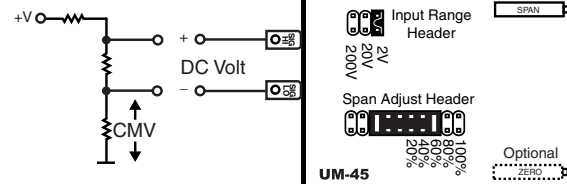

Max CMV (common mode voltage) = 50V*

Compatibility

The UM-Series NEMA case style is complementary to Texmate's Classic RP-Series. For economy, each UM model is dedicated to a specific application. UMs are ideal for upgrading or replacing the traditional USA NEMA case panel meters presently in use.

Traditional
NEMA
STYLE USA
CASE

Specifications

Input Configuration:Single-ended, however the isolated power supply enables differential measurements up to a maximum common mode of 50V.*
Provision for optional zero pot to offset the reading displayed. (See Ordering Information)

Full Scale Ranges:Three built in header selectable ranges of $\pm 2V$ DC, $\pm 20V$ DC & $\pm 200V$ DC FS

Input Impedance:1M Ω minimum

A/D Converter:16 Bit Dual Slope

Accuracy: $\pm$ (0.05% of reading + 3 digits)

Temp. Coefficient:100ppm/ $^{\circ}$ C (Typical)

Warm Up Time:2 minutes to specified accuracy

Conversion Rate:3 readings per second

Display:0.56" high efficiency LED
 Display Hold and Test Function

Polarity:Bipolar. Assumed +, displays -

Decimal Selection:Header under face plate, X•X•X•X•

Overload Indication:When input exceeds the full scale on any range being used, the meter displays flashing "0000"

Power Supply (std):120/240V AC, 50/60 Hz. approx 2.5W.

(Optn) VO-DC/ISOIsolated Switcher 9 to 36V DC/12 to 24V AC

(Optn) VO-24VIsolated Transformer 24V AC $\pm 10\%$

(Optn) VO-5V DCNon-isolated 5V DC $\pm 10\%$

Operating Temp.:-10 to 50 $^{\circ}$ C

Storage Temperature:-20 to 70 $^{\circ}$ C.

Relative Humidity:95% (non-condensing)

Case Dimensions:Bezel 4.06"Wx1.89"H (102.7Wx47.9Hmm)
 Depth behind bezel 3.64" (92.22 mm) Plus
 0.5 to .9" (12.7 to 22.8mm) depending on connector used.

Weight:10oz., 13oz. when packed.

UM-Series low cost utility meters for switchboard and process indication

UM-35AC1I/5 AC amps, Scaled RMS, (1 or 5 Amp internal shunt), 3.5 digit

UM-35ACAC volts, Scaled RMS. **199.9V AC**/500V AC Header Selectable Ranges, 3.5 digit

UM-40ACAC volts, Scaled RMS. **500.0V AC** full scale, high resolution 4 digit

UM-35HZ15Hz to **199.9Hz** or optionally 40Hz to 500Hz up to 500V AC input, 3.5 digit

UM-35DC Volts $\pm 2/20V$ DC Header selectable or optionally $\pm 2/200V$ DC, 3.5 digit

UM-35MVDC mV $\pm 50mV$ and $\pm 100mV$ select inputs to suit DC current shunts, 3.5 digit

UM-45DC Volts $\pm 2V/\pm 20V/\pm 200V$ DC Header selectable ranges 4.5 digit

UM-45MVDC mV $\pm 50 mV$, $\pm 100mV$, or $\pm 200mV$ selectable inputs to suit DC current shunts, 4.5 digit

UM-35CLProcess 4 to 20mA (**100.0**), easily user scalable, 3.5 digit

UM-35CLEProcess 4 to 20mA (**100.0**) with 24V DC excitation, easily user scalable in engineering units anywhere from -1999 to +1999. 3.5 digit

UM-45CLProcess 4 to 20mA (**100.00**), easily user scalable, 4.5 digit


UM-35PPressure, strain gage and load cell, 4 and 6 wire, 5V DC excitation, Header Selectable Sensitivity 2mV/V, 5mV/V, 10mV/V, **20mV/V**, 3.5 digit

UM-35J/KJ or K thermocouple input, 1 $^{\circ}$ resolution, order $^{\circ}$ C or $^{\circ}$ F, 3.5 digit

UM-35RTD100 Ω platinum RTD, 3 or 4 wire, order $^{\circ}$ C or $^{\circ}$ F and **0.1 $^{\circ}$** or **1 $^{\circ}$** , 3.5 digit

UM Case Dimensions and Panel Cutouts

This NEMA Case will fit any existing cutout with dimensions that are between the Snug and Loose Fitting dimensions shown below.

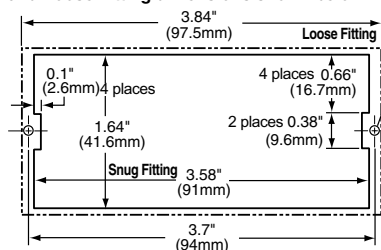


Panel Cutout for Front Panel Removal

To enable removal of the panel meter from a mounting panel without requiring rear access, make the panel cutout as shown above, using the mounting plate supplied with the meter as a template. The mounting holes should then be tapped to match the mounting screws.

To remove the face plate, carefully insert screwdriver blade at bottom slot to release catch and gently pry outward to release the plate.

For new installations see Optimum Panel Cutout or Panel Cutout for Front Panel Removal

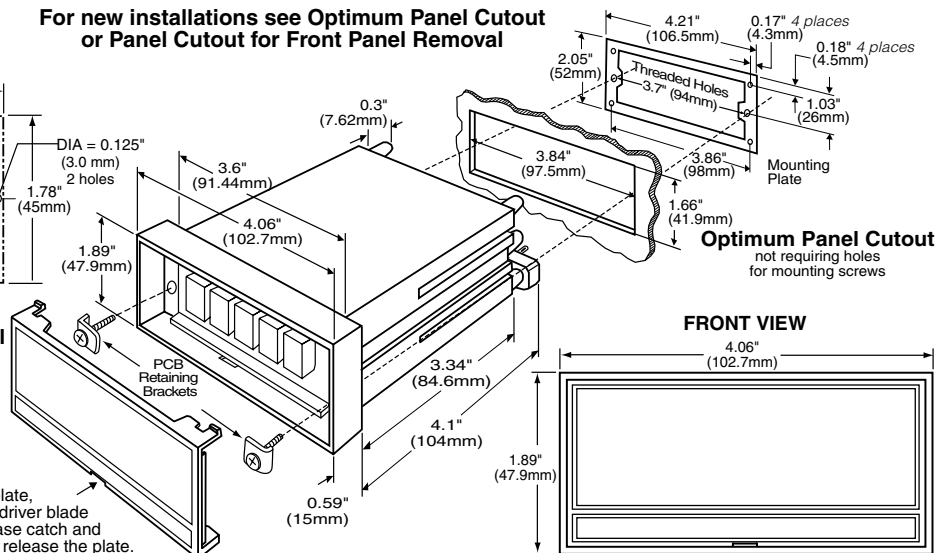

FRONT VIEW

Ordering Information

Standard Options for this Model Number

Part Number	Description
► BASIC MODEL NUMBER Includes 2 TB-KITs, standard display and standard power supply unless optional versions are ordered.	
UM-45.....	DPM, DC Volts, $\pm 2V/\pm 20V/\pm 200V$ DC Header selectable ranges
► DISPLAY	
STANDARD0.56" Red LEDs	
UM-BRIGHT4	Display: .56 inch, Super bright Red LEDs
UM-GREEN4	Display: .56 inch, Green LEDs
► POWER SUPPLY	
STANDARD100/120 or 200/240VAC User selectable	
V0-DC/ISO	Isolated auto-sensing AC/DC 9 to 36V DC/12 to 24V AC
V0-24V	Isolated transformer 12V AC or 24V AC user selectable
V0-5V DC	Non-isolated 5V DC only
► SPECIAL OPTIONS (Specify Inputs or Outputs & Req. Reading)	
HD-CHANGE	Range change from the standard input as shown in BOLD type
V0-50K.....	Zero offset Potentiometer 50K
CB-FS45	Non-Std Range and Scale changes for UM-45s

Special Options and Accessories

Part Number	Description
► ACCESSORIES (Specify Serial # for Custom Artwork Installation)	
75-RPCLEAR	Replacement Clear Lens for meter
75-RPFILTER	Replacement Red Lens for meter
CN-L15	Connector: Dual Row, 30 Pin Edge Conn., 0.156" ctr
CN-PUSH/UM	Connector: Push-on Terminal Block, 120V AC Pwr
CN-PUSH/UM01	Connector: Push-on Terminal Block, 200-240V AC Pwr
CN-PUSH/UM02	Connector: Push-on Terminal Block, 120/240V AC select.
CN-PUSH/UM03	Connector: Push-on Terminal Block, 24V AC pwr
CN-PUSH/UM04	Connector: Push-on Terminal Block, 9 to 36V DC/12 to 24V AC
CN-PUSH/UM05	Connector: Push-on Terminal Block, 5V DC
CN-UM/ANLGC	Connector: Pinout Changer to match Analogic AN20M02 etc ..
OP-N4SEAL/UM	NEMA 4 lens cover for UM Series meters
RP•CASE	Case: Replacement with Mounting Hardware
TB-KIT	Connector: extra Screw Terminal Blocks (3 sets=1 kit)
ART-FS-S/D	NRC for Artwork & set-up Custom Faceplate and or Descriptor ..
ART-FS-S/D/C	NRC for Artwork & set-up Custom Faceplate and Custom Logo ..
ART-FS-001	Produce & Install Custom Faceplate per meter - 1 color no-min ..
ART-FS-002	Produce & Install Custom Faceplate per meter - 2 color no-min ..
ART-FS-003	Produce & Install Custom Faceplate per meter - 3 color no-min ..
ART-FUM-001	Custom Faceplate, 100 piece Min. (\$3.00 each) - 1 color
ART-FUM-002	Custom Faceplate, 100 piece Min. (\$4.20 each) - 2 color
ART-FUM-003	Custom Faceplate, 100 piece Min. (\$5.40 each) - 3 color

Many other options and accessories are available.

WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the product for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.