

MODELS 10WP & 189

Current Transformers Wound Primary



Model 10WP



Model 189

REGULATORY AGENCY APPROVALS



E93779



LR89403

Manufactured to meet the requirements of ANSI/IEEE C57.13.
Classified by U.L. in accordance with IEC 44-1

Application

Ammeters and wattmeters.

Frequency

50-400 Hz.

Insulation Level

0.6 kV, BIL 10 kV full wave.

Continuous Thermal Current Rating Factor

1.33A at 30°C amb.,

1.0A at 55°C amb

Approximate weight:

Model 10WP - 1.5 lbs.

Model 189 - 0.75 lbs.

Model 10WP

CATALOG NUMBER	CURRENT RATIO	ANSI METERING CLASS AT 60 Hz	
		BO.1	BO.2
10WP-0025	2.5:5	0.6	0.6
10WP-005	5:5	0.6	0.6
10WP-0075	7.5:5	0.6	0.6
10WP-010	10:5	0.6	0.6
10WP-015	15:5	0.6	0.6
10WP-020	20:5	0.6	0.6
10WP-025	25:5	0.6	0.6
10WP-030	30:5	0.6	0.6
10WP-040	40:5	0.6	0.6

Model 189

CATALOG NUMBER	CURRENT RATIO	ANSI METERING CLASS AT 60 Hz	
		BO.1	BO.2
189-0025	2.5:5	0.6	0.6
189-005	5:5	0.6	0.6
189-0075	7.5:5	0.6	0.6
189-010	10:5	0.6	0.6
189-015	15:5	0.6	0.6
189-020	20:5	0.6	0.6
189-025	25:5	0.6	0.6
189-030	30:5	0.6	0.6
189-040	40:5	0.6	0.6
189-050	50:5	0.6	0.6
189-060	60:5	0.6	0.6
189-075	75:5	0.6	0.6
189-080	80:5	0.6	0.6
189-101	100:5	0.6	0.6




461 Boston Street, Unit E6, Topsfield, MA 01983

Toll Free (800) 644-9773 · Phone (978) 887-2020

meters@spectrumind.com

Model 10WP Wound Primary

The Model 10WP is a low ratio wound primary current transformer, suitable for primary currents up to 40 amperes. The table lists the most common current ratings. Primary terminals for the Model 10WP are: for ratios of 25:5 and below, No. 8-32 brass studs with one flatwasher and regular nut, for ratios of 30:5 and above, 1/4-20 brass studs with one flatwasher, lockers and regular nut.

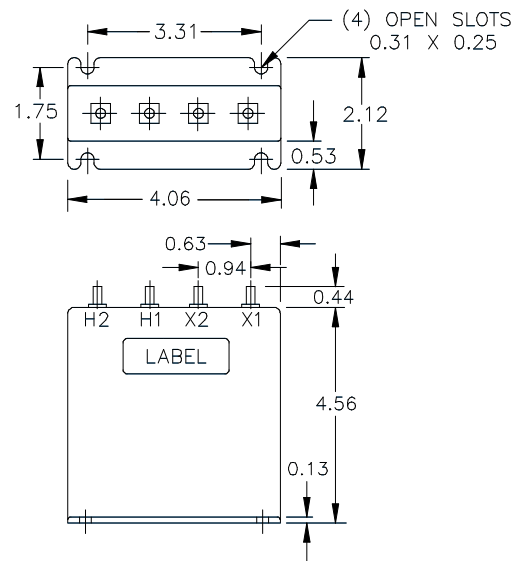

Model 189 Wound Primary

The Model 189 is a low ratio wound primary current transformer, suitable for primary current up to 100 amperes. The table lists the most common current ratings. Primary terminals for the Model 189 for ratios of 30:5 and below are No. 10-32 brass screws with one lockwasher (Dimension A=3.28), for ratios 40:5 and above, 3/8-16 brass studs with one lockasher and regular nut (Dimension A=4.10).

