

MODEL 610

Current Transformer High Accuracy Split Core

Window Size 1.30" x 1.47"



REGULATORY AGENCY APPROVALS



E93779



LR89403

Manufactured to meet the requirements of ANSI/IEEE C57.13.
Classified by U.L. in accordance with IEC 44-1

Application

For energy management systems and instrumentation equipment having a high input impedance, eg. 14K ohms minimum.

Frequency

50-400 Hz.

Insulation Level

0.6 kV, BIL 10 kV full wave.

Continuous Thermal Current Rating Factor

330 A at 30 °C. amb

250 A at 55 °C. amb.


Flexible leads are UL 1015, 105 °C, CSA approved, #18 AWG, 24" long unless otherwise specified.

Approximate weight 0.63 lbs.

Model 610

CATALOG NUMBER	CURRENT RATIO	BURDEN VA	ACCURACY AT 60 Hz
610-1000T	1,000 Turns	–	–
610-500T	500 Turns	–	–

TYPICAL PERFORMANCE CHARACTERISTICS
(WITH 1000 TURNS)

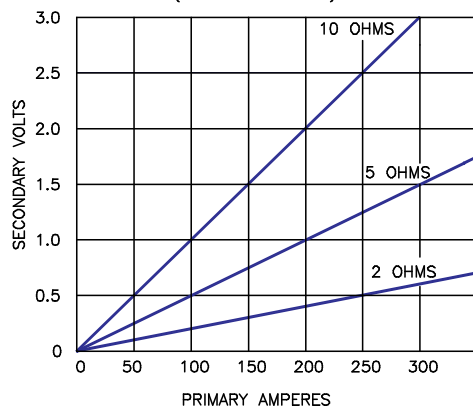

461 Boston Street, Unit E6, Topsfield, MA 01983
Toll Free (800) 644-9773 · Phone (978) 887-2020
meters@spectrumind.com

Model 610 High Accuracy Split Core

This transformer is designed for assembly to an existing electrical installation without the need for dismantling the primary bus or cables. It incorporates a snap fit between the fixed and removable sections.

This transformer is intended for use with high input impedance devices that require signal voltages up to 5 VAC.

The output can be rectified and filtered for devices requiring DC input. The non-linearity and voltage drop of the rectifiers and filters must be considered in the choice of the loading impedance.

Caution:

Proper safety precautions must be followed during installation by a trained electrician. Never install while bus is energized.

The current transformer must have its secondary terminals short circuited or the burden connected, before energizing the primary circuit.

