

MODELS CPTD3-60-25/ CPTD3-60-37.5 AND CPTD5-95-25/CPTD5-95-37.5

Medium Voltage Control Power Transformer



Application

To provide control power in medium voltage switchgear.

Frequency

60 Hz.

Insulation Level

15 kV Class, 95 kV BIL

Thermal Rating

25 kVA at 30°C ambient.
21.5 kVA at 55°C ambient. 80°C rise.
37.5 kVA at 30°C ambient.
32.2 kVA at 55°C ambient. 80°C rise.

Models CPTD3-60-25/CPTD5-95-25

Standard Typical Voltage - Consult Factory for Specials

**CATALOG NUMBER	PRIMARY VOLTAGE	RATIO	SECONDARY VOLTAGE	*FUSE RATING
CPTD3-60-25-242**	2400 V	20:1	120/240 V	25E
CPTD3-60-25-4161**	4160 V	34.7:1	120/240 V	15E
CPTD3-60-25-482**	4800V	40:1	120/240 V	15E
CPTD5-95-25-722**	7200 V	60:1	120/240 V	10E
CPTD5-95-25-842**	8400 V	70:1	120/240 V	10E
CPTD5-95-25-123**	12000 V	100:1	120/240 V	7E
CPTD5-95-25-1242**	12470 V	104:1	120/240 V	7E
CPTD5-95-25-1322**	13200 V	110:1	120/240 V	7E
CPTD5-95-25-1382**	13800 V	115:1	120/240 V	7E
CPTD5-95-25-1442**	14400 V	120:1	120/240 V	7E

* Note all fuse rating are based on NEC transformer overcurrent protection recommendations. Specific applications may require other other ratings.

** For 1 $\pm$ 7 1/2% taps use suffix "A" after Catalog No.

** For 2 $\pm$ 2 1/2% taps use suffix "B" after Catalog No.

Characteristics

H.V. Terminals are 3/8-16 brass inserts. L.V. Terminals are 1/2-13 brass studs.

Windings are encapsulated in epoxy resin.

Mounting base is steel.

Assembly is varnish coated.

Available as unfused only.

Self cooled.

For indoor use.

Approximate weight 650 lbs.

Models CPTD3-60-37.5/CPTD5-95-37.5

Standard Typical Voltage - Consult Factory for Specials


**CATALOG NUMBER	PRIMARY VOLTAGE	RATIO	SECONDARY VOLTAGE	*FUSE RATING
CPTD3-60-37.5-242**	2400 V	20:1	120/240 V	25E
CPTD3-60-37.5-4161**	4160 V	34.7:1	120/240 V	20E
CPTD3-60-37.5-482**	4800 V	40:1	120/240 V	20E
CPTD5-95-37.5-722**	7200 V	60 :1	120/240 V	20E
CPTD5-95-37.5-842**	8400 V	70:1	120/240 V	20E
CPTD5-95-37.5-123**	12000 V	100:1	120/240 V	10E
CPTD5-95-37.5-1242**	12470 V	104:1	120/240 V	10E
CPTD5-95-37.5-1322**	13200 V	110:1	120/240 V	10E
CPTD5-95-37.5-1382**	13800 V	115:1	120/240 V	10E
CPTD5-95-37.5-1442**	14400 V	120:1	120/240 V	10E



461 Boston Street, Unit E6, Topsfield, MA 01983
Toll Free (800) 644-9773 · Phone (978) 887-2020
meters@spectrumind.com


CPTD3-60-25/CPTD3-60-37.5/CPTD5-95-25/CPTD5-95-37.5

Connection Diagrams

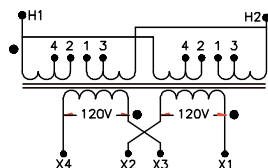


PRIMARY VOLTS	CONNECT
107.5%	1 - 2
100%	2 - 3
92.5%	3 - 4

1 $\pm 7\frac{1}{2}\%$ PRIMARY TAPS
SUFFIX "A"

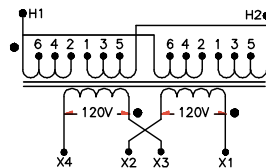

PRIMARY VOLTS	CONNECT
105%	1 - 2
102.5%	2 - 3
100%	3 - 4
97.5%	4 - 5
92.5%	5 - 6

2 $\pm 2\frac{1}{2}\%$ PRIMARY TAPS
SUFFIX "B"

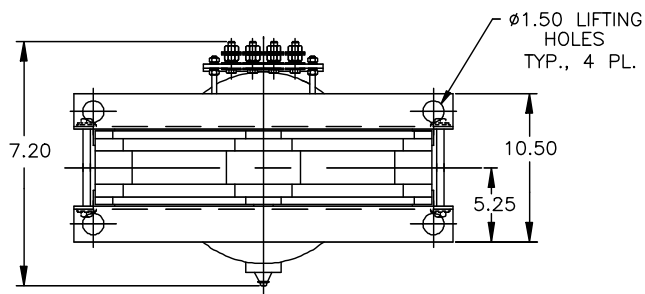

L.V. TERMINALS FACING TERMINALS			
X1	X3	X2	X4
JUMPER CONNECTIONS TERMINALS #		VOLTAGE	
X1 - X3		120V	
X2 - X4		120V	
X2 - X3		240V	

LOAD CONNECTIONS X1 - X4

NOTE: LV TERMINAL CONNECTOR
NOT SHOWN IN THIS VIEW.

