

MODELS CPTD3-60-50 & CPTD5-95-50

Medium Voltage Control Power Transformer



Application

To provide control power in medium voltage switchgear.

Frequency

60 Hz.

Insulation Level

CPTD3 -5 kV Class, 60 kV BIL
CPTD5-15 kV Class, 95 kV BIL

Thermal Rating
50 kVA at 30°C ambient.
42.9 kVA at 55°C ambient. 80°C rise.

Characteristics

Primary terminals are 3/ 8-16 inserts. Secondary terminals are 1/2-13 brass studs.

Supplied with taps on primary side:

Cat. suffix A $\pm 7 \frac{1}{2}\%$ taps or Cat. suffix B (2) $\pm 2 \frac{1}{2}\%$ taps

Windings are encapsulated in epoxy resin.

Mounting base is steel.

Assembly is varnish coated.

Available as unfused only.

Self cooled.

For indoor use.

Approximate weight 750 lbs.

Models CPTD3-60-50 & CPTD5-95-50

Standard Typical Voltage - Consult Factory For Specials

**CATALOG NUMBER	PRIMARY VOLTAGE	RATIO	SECONDARY VOLTAGE	*FUSE RATING
CPTD3-60-50-242**	2400V	20:1	120/240 V	40E
CPTD3-60-50-4161**	4160 V	34.7:1	120/240 V	25E
CPTD3-60-50-482**	4800V	40:1	120/240 V	25E
CPTD5-95-50-722**	7200 V	60:1	120/240 V	25E
CPTD5-95-50-842**	8400V	70:1	120/240 V	25E
CPTD5-95-50-123**	12000 V	100:1	120/240 V	15E
CPTD5-95-50-1242**	12470 V	104:1	120/240 V	15E
CPTD5-95-50-1322**	13200 V	110:1	120/240 V	10E
CPTD5-95-50-1382**	13800 V	115:1	120/240 V	10E
CPTD5-95-50-1442**	14400 V	120:1	120/240 V	10E

*Note all fuse rating are based on NEC transformer overcurrent protection recommendations. Specific applications may require other ratings.

**For $1 \pm 7 \frac{1}{2}\%$ taps use suffix "A" after Catalog No.


**For $2 \pm 2 \frac{1}{2}\%$ taps use suffix "B" after Catalog No.



461 Boston Street, Unit E6, Topsfield, MA 01983
Toll Free (800) 644-9773 · Phone (978) 887-2020
meters@spectrumind.com


Models CPTD3-60-50 & CPTD5-95-50

Connection Diagrams

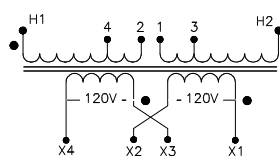

PRIMARY VOLTS	CONNECT
107.5%	1 - 2
100%	2 - 3
92.5%	3 - 4

1 $\pm 7-1/2\%$ PRIMARY TAPS
SUFFIX "A"

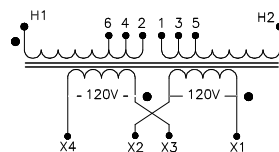

PRIMARY VOLTS	CONNECT
105%	1 - 2
102.5%	2 - 3
100%	3 - 4
97.5%	4 - 5
92.5%	5 - 6

2 $\pm 2-1/2\%$ PRIMARY TAPS
SUFFIX "B"

TOLERANCE:

1 PL ± 0.25

2 PL ± 0.13

