

MODELS CTW5-L-110 & CTWH5-L-110

Wound Primary Current Transformers Medium Voltage

Application

Metering and relaying.

Frequency

50-400 Hz.

Maximum System Voltage

15.5 kV, BIL 110 kV.

Continuous Thermal Rating Factor


1.00 at 30°C., 0.85 at 55°C.

Specifications


Primary terminals are 1/2-13 bolts with one Belleville washer. Secondary terminals are brass screws No. 10-32 with one flatwasher, lockwasher.

Vacuum cast in polyurethane resin. Other ratios, secondary currents and dual ratios are available. Refer to factory.

Approximate weight 34 lbs

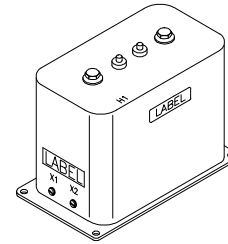

Model CTW5-L
Without Primary Bus

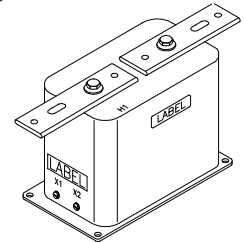

Model CTW5-L
Without Primary Bus

REGULATORY AGENCY APPROVALS



E93779



LR89403

Manufactured to meet the requirements of ANSI/IEEE C57.13.
Classified by U.L. in accordance with IEC 44-1



461 Boston Street, Unit E6, Topsfield, MA 01983
Toll Free (800) 644-9773 · Phone (978) 887-2020
meters@spectrumind.com

Models CTW5-L-110 & CTWH5-L-110

CAUTION: Use only the Belleville washers supplied. Tighten to between 25 to 30 foot-pounds. DO NOT OVERTIGHTEN




CATALOG NUMBER	CURRENT RATIO	RELAY CLASS	ANSI METERING AT 60 Hz					**THERMAL CURRENT RATING 1 SECOND rms Amps
			B0.1	B0.2	B0.5	B0.9	B1.8	
CTW5-L-110-T20-050	5:5	T20	0.3	0.3	0.6	1.2	2.4	375
CTW5-L-110-T20-100	10:5	T20	0.3	0.3	0.6	1.2	2.4	590
CTWS-L-110-T20-150	15:5	T20	0.3	0.3	0.6	1.2	2.4	1,200
CTW5-L-110-T20-250	25:5	T20	0.3	0.3	0.6	1.2	2.4	1,700
CTW5-L-110-T20-300	30:5	T20	0.3	0.3	0.6	1.2	2.4	1,700
CTW5-L-110-T20-400	40:5	T20	0.3	0.3	0.6	1.2	2.4	2,400
CTW5-L-110-T20-500	50:5	T20	0.3	0.3	0.6	1.2	2.4	4,715
CTW5-L-110-T20-750	75:5	T25	0.3	0.3	0.6	1.2	2.4	4,715
CTW5-L-110-T20-101	100:5	T25	0.3	0.3	0.6	1.2	2.4	8,625
CTW5-L-110-T20-151	150:5	T25	0.3	0.3	0.6	1.2	2.4	11,500
CTW5-L-110-T20-201	200:5	T30	0.3	0.3	0.6	1.2	2.4	11,500
CTW5-L-110-T20-251	250:5	T20	0.3	0.3	0.6	1.2	2.4	21,700
CTW5-L-110-T20-301	300:5	T25	0.3	0.3	0.6	1.2	2.4	21,700
CTW5-L-110-T20-401	400:5	T30	0.3	0.3	0.6	1.2	2.4	44,700
CTW5-L-110-T20-501	500:5	T35	0.3	0.3	0.3	0.6	1.2	44,700
CTW5-L-110-T20-601	600:5	T40	0.3	0.3	0.3	0.6	1.2	44,700

**For ordering with primary bars, change model number to CTWH5-L.
A test card is provided with each unit.*



461 Boston Street, Unit E6, Topsfield, MA 01983
Toll Free (800) 644-9773 · Phone (978) 887-2020
meters@spectrumind.com

Models CTW5-L-110 & CTWH5-L-110 Wound Primary CT

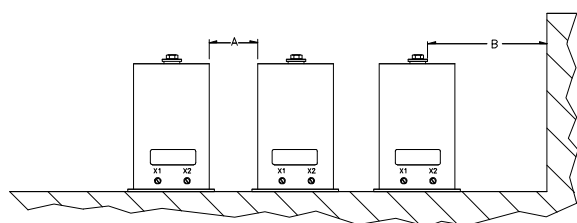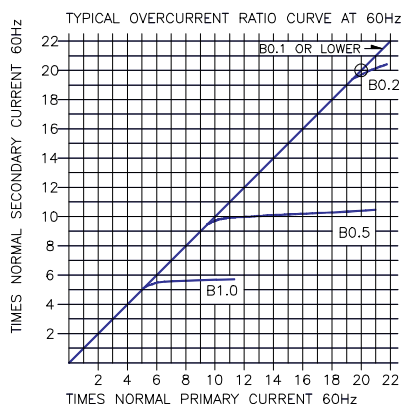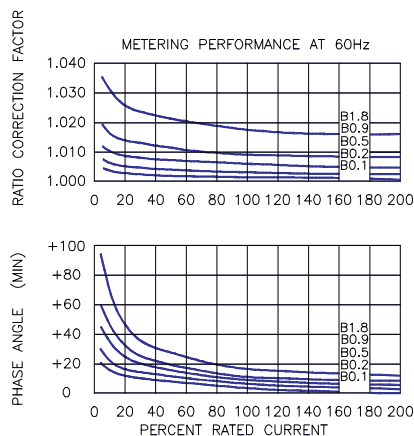

RECOMMENDED MINIMUM SPACINGS

A = Unit to Unit = 2.00" minimum.

B = HV to Ground in Air = 6.50" minimum.

Recommended spacing are for guidance only. User needs to set appropriate values to assure performance for high potential test, impulse test, high humidity, partial discharge, high altitude, and other considerations like configuration.

Bar Sizes

PRIMARY CURRENT	DIMENSIONS	
	A	B
5 to 200 A	0.25	1.50
250 to 1,200A	0.38	2.00

