

MODEL JCT-0S

RevenueSense™

Revenue Metering Current Transformer



Application

RevenueSense™ is a revenue metering current transformer which maintains IEEE 0.15 accuracy class from 1 % of rated current up through rating factor. This is accomplished using the specialized amorphous core material which minimizes electrical core losses. The result is an extremely accurate CT that can maintain high accuracy over a extended range of current. Model JCT-0S is designed for indoor service, and is available in bar-type or window-type designs.

Features

- Voltage Class: 0.6 kV
- Insulation Level: 10 kV BIL
- Frequency: 50-60 Hz
- Application: Indoor
- Window Size: 1.31"

Model JCT-0S

CURRENT RATIO (Amps)	IEEE METERING ACCURACY (60 Hz)	RATING FACTOR		PRIMARY BAR	CATALOG NUMBER		
		30°C	55°C		NO BASE	LOW BASE	HIGH BASE
600:5	0.155B0.2	2.0	1.5	Yes	750X323001	750X323002	750X323003 ⁴

(1) Exceeds IEEE definition for special high accuracy. Maintains 0.15 Accuracy from 1% to Rating Factor.

(2) Window-style option available, upon request. Contact info@spectrumind.com for more details.

(3) Other designs available, upon request. Contact info@spectrumind.com for more details.

(4) Measurement Canada Approval: AE-2422


Benefits

- Maximize revenue metering accuracy with special high accuracy rating extended beyond IEEE requirements
- Simplify CT selection and billing multipliers, improving productivity and minimizing risk of error
- Reduce inventory and part number requirements, reducing asset and operational costs

0.15 Class – High Accuracy



0.15S Class – Special High Accuracy




RevenueSense™



461 Boston Street, Unit E6, Topsfield, MA 01983
Toll Free (800) 644-9773 · Phone (978) 887-2020
meters@spectrumind.com

Model JCT-0S - Dimensions

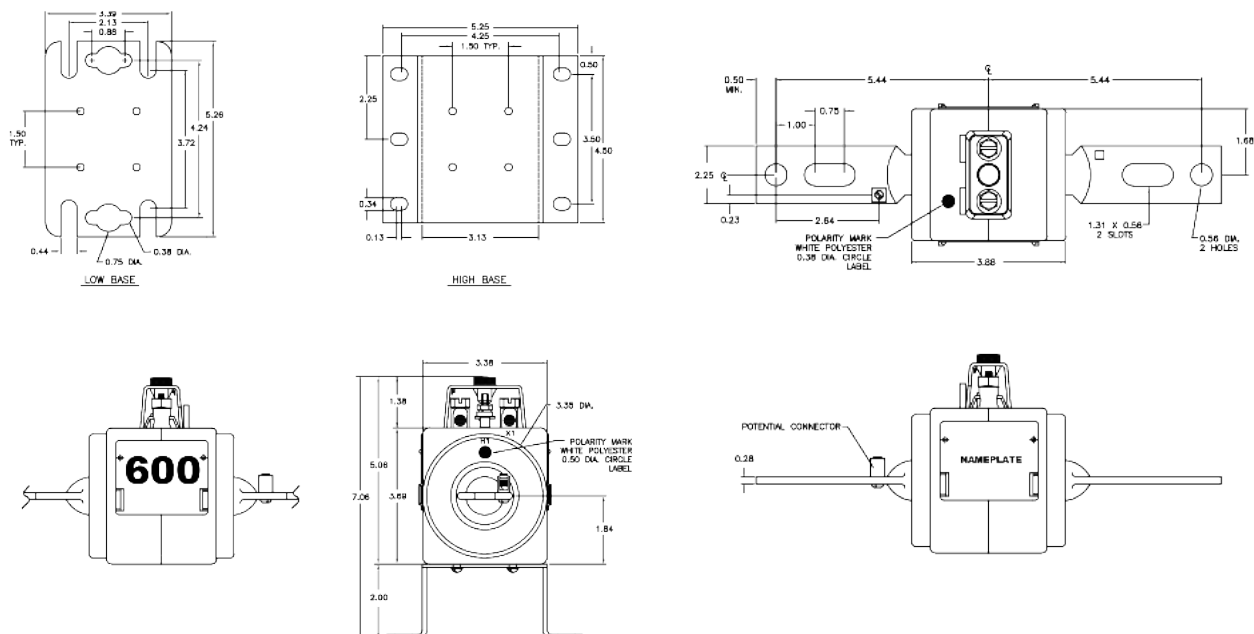

REFERENCE DRAWINGS		WEIGHT	
OUTLINE	TRANSFORMER, WITH BAR	LOW BASE, ADD	HIGH BASE, ADD
0121C49855	7 lbs	0.3 lbs	1 lbs

Construction and Insulation

The core and coil are enclosed in a case molded with Valox thermoplastic polyester resin. This tough material has excellent electrical and mechanical properties over a wide temperature range, has low water absorption and is resistant to oil and a variety of chemicals.

Core and Coils

The core is manufactured with high-efficiency material that reduces energy losses, allowing for higher accuracy over a wider range. The secondary winding is made of heavy enameled copper wire evenly distributed around the core for maximum accuracy and resistance to stray fields from adjacent conductors.

Terminals

Secondary terminals are tin plated brass, compression type with a 0.275" diameter cross-hole for wiring and a 1/4-28 clamp screw. A shorting device is provided and interlocked to the terminal cover. The terminal cover is made of a clear plastic. Provision is made for sealing the cover.

Polarity

Nameplates

The nameplate is laser engraved aluminum. It is attached to the top of the unit and has provision for attaching the user's identifying tag. The nominal current rating is marked on the side of the unit in large numerals.

Primary Bars

Formed from solid copper bar, they are tin-plated. They are non-removable and have a potential connector that can be attached above or below the bar at either end.

Baseplate and Mounting

The transformer can be mounted in any position and may be suspended from the bus-bar or cable. It has provision for attaching two optional bases. Low bases are made from stainless steel. The high base increases the transformer height by 2 inches.

Maintenance

These transformers require no maintenance, other than occasional cleaning, if installed where air contamination is severe.

